

Power On

- Tap the power button

Change Color Profile*

- Tap the power button while holding the auxiliary button

Enter Effect Menu

- Hold the power button, then hold it again. Point the saber upwards while doing this.
- Change Blade Profile*
 - Slowly twist the saber
- Change On Top Effect*
 - Tap the auxiliary button
- Save And Leave
 - Hold the power button until the confirmation sound is played

Enter Accent Menu

- Hold the power button, then hold it again. Point the saber downwards while doing this.
- Change Ignited Accent Profile*
 - Tap the power button
- Go To Ignited Accent Profile
 - Hold the power button
- Change Standby Accent Profile*
 - Tap the power button
- Save And Leave
 - Hold the power button until the confirmation sound is played

Enter Color Change Menu

- Hold the power button, then tap it. Point the saber upwards while doing this.
- Cycle Through Preset Color Profiles
 - Slowly twist the saber
- Save And Leave
 - Hold the power button

Enter Lockup Mode

- Hold the auxiliary button, then tap it. Point the saber upwards while doing this.
- Leave Lockup Mode
 - Tap the auxiliary button

Enter Drag Mode

- Hold the auxiliary button, then tap it. Point the saber downwards while doing this.
- Leave Drag Mode
 - Tap the auxiliary button

Enter Melt Mode

- Hold the power button, release it, and then perform a stab
- Leave Melt Mode
 - Tap the power button

Blaster Block

- Tap the auxiliary button

Force Push

- Hold the auxiliary button while swinging the saber

Activate Power Saving

- Hold the power button while performing a stab

Deactivate Power Saving

- Hold the power button while performing a stab

Power Off

- Hold the power button until the saber shuts down

Enter Sound Font Menu

- Hold the auxiliary button before the blade is ignited. Point the saber upwards while doing this.
- Go To Next Sound Font*
 - Slowly twist the saber
- Jump 10 Sound Fonts Further*
 - Tap the power button
- Save And Leave Sound Font Menu
 - Hold the auxiliary button

Show Battery Indicator

- Hold the power button while performing a stab before the saber is ignited
- Calibrate Battery
 - When your battery is fully charged, perform a stab while the battery level is displayed

Enter Volume Control

- Hold the auxiliary button before the blade is ignited. Point the saber downwards while doing this.
- Adjust Volume
 - Slowly twist the saber
- Save And Leave Volume Control
 - Tap the power button

Start Background Music

- Hold the power button before the saber is ignited, then release it. Point the saber upwards while doing this.
- Skip Track
 - Tap the auxiliary button
- Stop Background Music
 - Hold the power button before the saber is ignited, then release it

Enter Saber Editor

- Hold the power button before the saber is ignited, then release it. Point the saber downwards while doing this.
- Select Editor Mode
 - Tap the power button
- Color Profile
- Select Color Profile
 - Slowly twist the saber
- Edit Color
 - Slowly twist the saber

- Go To Next Saber State
 - Tap the power button
- Revert Colors To Default
 - Perform a stab
- Save Color Profile
 - Hold the power button
- Confirm Selection
 - Tap the power button
- Save and Leave Editor Mode
 - Hold the power button
- Pixel Number
- Edit Pixel Number
 - Slowly twist the saber
- Save and Leave Editor Mode
 - Hold the power button
- Ignition Speed
- Select Sound Font
 - Slowly twist the saber
- Edit Ignition Speed
 - Slowly twist the saber
- Save Ignition Speed
 - Hold the power button
- Confirm Selection
 - Tap the power button
- Save and Leave Editor Mode
 - Hold the power button
- Retraction Speed
- Select Sound Font
 - Slowly twist the saber
- Edit Retraction Speed
 - Slowly twist the saber
- Save Retraction Speed
 - Hold the power button
- Confirm Selection
 - Tap the power button
- Save and Leave Editor Mode
 - Hold the power button
- Ignition Type
- Select Blade Style
 - Slowly twist the saber
- Edit Ignition Type
 - Slowly twist the saber
- Save Ignition Type

- Hold the power button
- Confirm Selection
 - Tap the power button
- Save and Leave Editor Mode
 - Hold the power button
- Retraction Type
- Select Blade Style
 - Slowly twist the saber
- Edit Retraction Type
 - Slowly twist the saber
- Save Retraction Type
 - Hold the power button
- Confirm Selection
 - Tap the power button
- Save and Leave Editor Mode
 - Hold the power button
- Battle Configuration
- Blaster Block Mode
- Button and Swinging
 - Slowly twist the saber clockwise
- Button
 - Slowly twist the saber counterclockwise
- Force Push Mode
- Button and Swinging
 - Slowly twist the saber clockwise
- Button
 - Slowly twist the saber counterclockwise
- Lockup Mode
- Button and Clashing
 - Slowly twist the saber clockwise
- Button
 - Slowly twist the saber counterclockwise
- Save and Leave Editor Mode
 - Hold the power button
- Gesture Controls
- Stab Ignition
- Turn stab ignition on
 - Slowly twist the saber clockwise
- Turn stab ignition off
 - Slowly twist the saber counterclockwise
- Twist Ignition
- Turn twist ignition on
 - Slowly twist the saber clockwise

- Turn twist ignition off
 - Slowly twist the saber counterclockwise
- Swing Ignition
- Turn swing ignition on
 - Slowly twist the saber clockwise
- Turn swing ignition off
 - Slowly twist the saber counterclockwise
- Twist Retraction
- Turn twist retraction on
 - Slowly twist the saber clockwise
- Turn twist retraction off
 - Slowly twist the saber counterclockwise
- Go To Next Gesture Control
 - Tap the power button
- Save and Leave Editor Mode
 - Hold the power button
- Effect Font Slot
- Select effect font slot
 - Slowly twist the saber
- Save and Leave Editor Mode
 - Hold the power button
- Save And Leave Saber Editor
- Confirm Selection
 - Hold the power button

Wake Up From Deep Sleep

- Tap the power button

Reset

- Hold the power button for 10 seconds